


LV HRC components

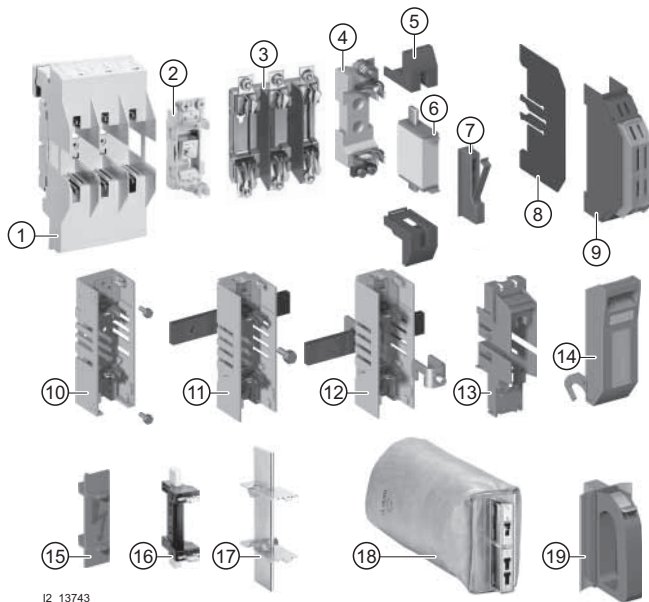

- ① LV HRC fuse base from the SR60 busbar system
- ② LV HRC fuse base for busbar mounting
- ③ LV HRC fuse base, 3P
- ④ LV HRC fuse base, 1P
- ⑤ LV HRC contact covers
- ⑥ LV HRC fuse link
- ⑦ LV HRC signal detectors
- ⑧ LV HRC partition
- ⑨ LV HRC protective cover
- LV HRC fuse bases with slewing equipment,
 - ⑩ - for screw fixing on mounting plate
 - ⑪ - for screw fixing on busbar system
 - ⑫ - for claw fixing on busbar
- ⑬ LV HRC protective cover for LV HRC fuse bases with slewing equipment
- ⑭ LV HRC slewing equipment
- ⑮ LV HRC fuse base cover
- ⑯ LV HRC isolating link with insulated grip lugs
- ⑰ LV HRC isolating link with non-insulated grip lugs
- ⑱ LV HRC fuse puller with sleeve
- ⑲ LV HRC fuse puller