

## Ordering Data for Variant Independent Options

Option	Order No.
Basic Operator Panel (BOP)	<b>6SE6400-0BP00-0AA0</b>
Advanced Operator Panel (AOP)	<b>6SE6400-0AC00-0AA0</b>
Operator Panel Mounting Kit (includes: Desktop Frame + Interface Link Cable)	<b>6SE6401-1DF00-0AA0</b>
Interface Link Cable, serial	<b>6SE6401-1BL00-0AA0</b>
Connection Set for PC to Inverter (includes RS-232 standard cable and adapter for operator panel mounting kit)	<b>6SE6400-1PC00-0AA0</b>
Connection Set for PC to AOP	<b>6SE6400-0PA00-0AA0</b>
Operator Panel Door Mounting Kit for Single Inverter	<b>6SE6400-0PM00-0AA0</b>
5 m Cable Assembly for Door Mounting Kit	<b>6SE6401-1CA00-0AA0</b>
PROFIBUS Addressing Connector	<b>6ES7194-1KB00-0XA0</b>